WTP-8B66 Series

User's Manual

P/N: 205G00WTP8B660, Version V1.0

Copyright © 2015, ALL RIGHTS RESERVED.

All other brand names are registered trademarks of their respective owner

Copyright Notice
Copyright © 2015
All Rights Reserved.
Printed in Taiwan.

The information contained in this document is subject to change without any notices.

Acknowledgments

Greeting & Setup

Thank you for purchasing the WTP-8B66 Panel PC. We wish that this unit will be durable and reliable in providing your needs. Please follow the instructions below to ensure the unit continues to have high performance

Unpacking

After opening the carton, there will be a unit with an accessory box. Examine the contents to see if there are damages to the unit and if all accessories are present.

Setting up

Please read this manual carefully and remember to keep this manual for future reference.

Safety Instructions & Cleaning

The unit has undergone various tests in order to comply with safety standards. Inappropriate use may be dangerous. Please remember to follow the instructions below to insure your safety during the installation and operating process.

Transporting & Placement of unit

1. When moving the unit on a cart; be very cautious. Quick stops,

excessive forces and uneven surfaces may cause the cart to overturn thus risking the unit to fall to the ground.

2. If the Monitor display unit does fall to the ground, immediately turn the power off and disconnect cords. Then contact a service technician for repairs. Continual use of the unit may result cause a fire or electric shock. Also, do not repair the unit on your own.
3. Having two or more people transporting the display unit is recommended. In addition, when installing the open frame by suspending it also requires two or more people.
4. Before suspending the unit, make sure the material used for suspension is sturdy and stable. If not properly suspended, the display unit may fall and cause serious injury to people standing nearby as well as to the unit itself.
5. If you wish to mount the display unit, remember to use only the mounting hardware recommended by the manufacturer.

Electrical and Power Source Related

1. This Monitor display unit must operate on a power source as shown on the specification label. If you are not sure what type of power supply used in the area, consult your dealer or local power supplier.
2. The power cords must not be damaged. Applied pressure, added heat, and tugging may damage the power cord.
3. The power cord must be routed properly when setup takes place. We advise that this aspect measure is to prevent people from stepping on the cords or while the unit is suspended to prevent flying objects from getting tangled with the unit.
4. Do not overload the AC outlets or extension cords. Electrical shocks or fires may occur from overloading.
5. Do not touch the power source during a thunderstorm.

6. If your hands are wet, do not touch the plug.
7. Use your thumb and index finger, grip firmly on the power cord to disconnect from the electrical socket. By pulling the power cord, may result in damaging it.
8. If the unit is not going to be in use for an extended period of time, remember to disconnect the unit.
9. Connect the unit to a power source with the same numerical value as spec. label shown. Please use only the power cord provided by the dealer to ensure safety and EMC compliance.

Various Factors of Environment

1. Do not insert objects into the openings.
2. Do not have liquids seep into the internal areas of the Monitor display unit.
3. Having liquids seep in or inserting objects into the unit may result in electric shocks from taking and/or short circuiting the internal parts.
4. Do not place the Monitor display unit in the presence of high moisture areas.
5. Do not install the Monitor display unit in a wet environment.
6. Do not place near unit near heat generating sources.
7. Do not place the unit in a location where it will come in contact with fumes or steam.
8. Remember to keep the Monitor display unit away from the presence of dust.
9. If water has flow in or seep in, immediately disconnect the open frame unit. Then contact a service technician for repairs.

Ventilation Spacing

1. Do not cover or block the openings on the top and back sides of the

display unit. Inadequate ventilation may cause overheating thus reducing the lifespan of the unit.

2. Unless proper ventilation is present, do not place unit in an enclosed area; such as a built-in shelf. Keep a minimum distance of 10 cm between the display unit and wall.

Cleaning the unit

1. Remember to turn off the power source and to unplug the cord from the outlet before cleaning the unit.
2. Carefully dismount the unit or bring the unit down from suspension to clean.
3. Use only a dry soft cloth or clean room wiper when cleaning the LCD panel or touch screen surface. Use a soft cloth moistened with mild detergent to clean the display housing.
4. Remember to avoid having liquids seep into the internal components.

Servicing, Repairing, Maintenance & Safety Checks

1. If the unit is not functioning properly, observe the performance level of the display closely to determine what type of servicing is needed.
2. Do not attempt to repair the Monitor display unit on your own. Disassembling the cover exposes users' to high voltages and other dangerous conditions. Notify and request a qualified service technician for servicing the unit.
3. If any of the following situations occur turn the power source off and unplug the unit. Then contact a qualified service technician
   i. A liquid was spilled on the unit or objects have fallen into the unit.
   ii. The unit is soaked with liquids.
   iii. The unit is dropped or damaged.
   iv. If smoke or strange odor is flowing out of the open frame unit.

v. If the power cord or plug is damaged.

vi. When the functions of the unit are dysfunctional.

4. When part replacement is needed. Make sure service technician uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. If unauthorized parts are used it may result in starting a fire, electrical shock and/or other dangers.

Battery Installation

Follow below instructions and notice the caution for replacing and disposing of the RTC Lithium battery CR2032 for safety consideration.

CAUTION:

There is danger of explosion, if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instruction.

The specification is subject to change without notice.

Version Change History

Date	Version	Description	Remark
2014/12/29	V1.0	First release	Ivy

How to Use This Manual 1

System Overview 2

System View 7

Setting up the System..... 9

Installing System Software 9

Installing the Drivers..... 10

Appendix 11

A. Jumper settings and Connectors 11

How to Use This Manual

This manual is written for the system integrator, PC technician and knowledgeable PC end user. It describes how to configure your WTP-8B66 Panel PC to meet various operating requirements. The user's manual is divided into three chapters, with each chapter addressing a basic concept and operation of the server board.

Chapter 1: System Overview - presents what you have inside the box and gives you an overview of the product specifications and basic system architecture for the WTP-8B66 Panel PC.

Chapter 2: System Installation - describes how to set up the system.

Chapter 3: BIOS Setup Information - specifies the meaning of each setup parameter, how to get advanced BIOS performance and update to a new BIOS. Additionally, the POST checkpoint list will give you a guide for troubleshooting.

The contents of this manual are subject to change without prior notice. These changes will be incorporated in new editions of this manual.

Touch Chemical Resistance

Chemical Resistance

The active area of the touchscreen is resistant to the following chemicals when exposed for a period of one hour at a temperature of 70℉ (21℃) :

- **Industrial Chemicals:** Acetone, Methylene chloride, Methyl ethyl ketone, Isopropyl alcohol, Hexane, Turpentine, Mineral spirits, Unleaded Gasoline, Diesel Fuel, Motor Oil, Transmission Fluid, Antifreeze.
- **Food Service Chemicals:** Ammonia based glass cleaner, Laundry Detergents, Cleaners (Fantastic, Formula 409, Joy, etc.), Vinegar, Coffee, Tea, Grease, Cooking Oil, Salt.

System Overview

WTP-8B66- 15

System

CPU	*Intel® Celeron® J1900 2.0 GHz quad-core processor 10W*	
Graphic	*Intel® HD Graphics*	
Audio	*Realtek ALC262 Audio Codec, 2+2 watts power amplifier*	
LAN	*Intel I210-AT Gigabit Ethernet x 2*	
Memory	*Dual Channel, two DDR3 SODIMM socket support up to 8GB* DDR3L-1333	
Serial ATA	*SATA II controller (3.0Gb/sec) Port x 2*	
Serial port	*External RS232/RS422/RS485 x 1(BIOS 設定, RS485 auto flow), RS232 x 1*	
	Internal RS232 x 1	
		RS232 (Jumper 5V, 12V) x1
USB	*External*	*USB 2.0 type a x 4*
	Internal	*Mini-PCIE x 2(default) or USB 2.0 pinhead x 2(option)*
		Touch x 1
		Pin head X 2
WDT	*Generates system reset; 256 segments, 0, 1, 2…25*	

BIOS

Brand: AMI

Flash ROM size: 64MB

Support RTC wakeup /Wake on LAN /Power on after power failure/PnP/AC PI/RTC

**com port have to be disabled if PXE enable. It is a limitation

- Press F11 to Quick boot menu.
  Select First LAN port for PXE boot.

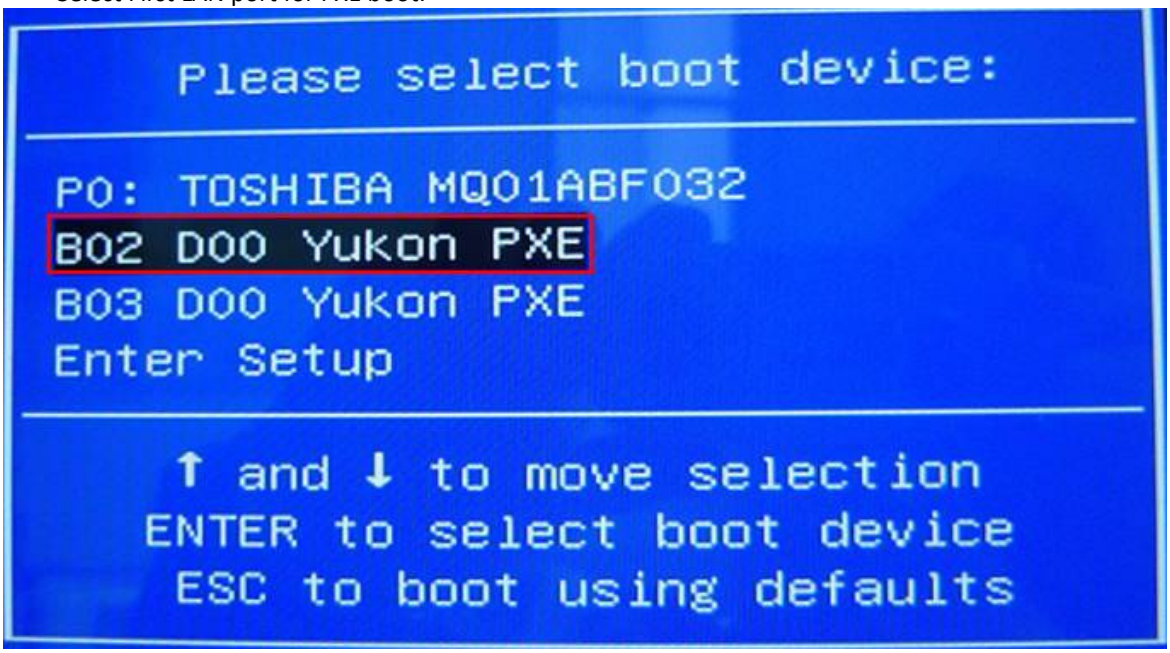
Please select boot device:
P0: TOSHIBA MQ01ABF032
B02 D00 Yukon PXE
B03 D00 Yukon PXE
Enter Setup
↑ and ↓ to move selection
ENTER to select boot device
ESC to boot using defaults

Display

Brand	***Tianma***
Model	*TM150TDS50*
Resolution (pixel)	*1024x768 XGA*
Active Area (mm)	*304.128 (W) x*

	228.096 (V)
Outline Dimensions (mm)	*326.5 (H) ×253.5 (V) ×11.8*
Pixel Pitch (mm)	*0.297*
Mode	*TN*
Number of Colors	*16.7M*
View Angle (H/V)	*160/160*
Brightness (cd/m2)	*400*
Contrast Ratio	*600:1*
Response Time (ms) (at 25°C)	*8*
Backlight	*LED*
Weight (g)	*1000*
life time<Hrs>	*50000*

Touch Screen

	ELO
Model name	*E249624*
Type	*5 wire RES*
Glove	*Any type glove*
Stylus	*No Limitation, can use any stylus*
Interface	*USB*
Light Transmission	*80±5%*
Hardness	*4H*
Glass thickness	*2.4mm*
Linearity	*X≦1.5%, Y≦1.5%*
Active area	*308.11x232.09mm*
Resolution	*4096x4096*
Lifetime	*35 million activations*

Storage
2.5" SATA drive bay x 1

Expansion slots
Mini-PCIe x2

External water/dust resistant I/O (rear side)
USB 1 x M12 8pin for USB 1/2
1 x M12 8pin for USB 3/4
COM 1 x M12 8pin for COM 1/RS-232/422/485 (Default RS-232)
1 x M12 8pin for COM 2/RS-232
RS-232: TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND

LAN 1 x M12 8pin for LAN 1
Power 1 x M12 5pin DC power connector

Power
Power DC-In connector x 1
Power Input DC7V~32V
Power Adapter AC 90 ~ 264V / 47 ~ 63 Hz / DC output 12V,
IP67 Power ON/Off and reset buttons at rear side
Power consumption 67.5w(full loading) 2.3w (S3)

Mechanical & Environmental
Material construction SUS304 stainless steel enclosure, chassis type

Fanless cooling
Water and dust protection *IP66 / NEMA4X*
Operation Temperature *0~40℃ (IEC60068-2-2, HDD, air flow cooling)*
Storage Temperature *-20~60℃*
Operation Relative Humidity *10%~90%, non-condensing*
Storage Relative Humidity *10%~90%, non-condensing*
Dimensions *395x309.5x58*
Net Weight *12.4kg*
Gross Weight *8.4kg*
Mounting *VESA (100x100 mmxmm), side mount (M6*2)*

Supported OS

Win 7, Win 7 Pro, Win8.1

Options

1. *Wireless or WIFI and BT kit (2 ant)*
2. *Waterproof COM cable, cable length is 2 meters*
3. *Waterproof USB cable, cable length is 2 meters*
4. *Waterproof LAN cable, cable length is 2 meters*
5. *wall mount / table mount bracket (option)*
6. *SSD*
7. *Intel Core i7-3517U (option) turbo mode disable*
8. *2 external LAN*

Customization (by DRF)

1. *sunlight readable optical bonding*
2. *anti UV and 7H coating*
3. *full flat PCT touch screen IP69K*
4. *1000 nit high brightness LCD*
5. *LCD Auto dimming*
6. *LCD Super dimming (low brightness)*

Packing list

7. *WTP-8B66-15*
8. *DVD-Title for driver and manual*
9. *Power adapter*
10. *Power cord*

Regulatory

FCC, CE (EMC), VCCI class B

Shock/Vibration/Drop

Shock/Vibration /Drop

<table>
<tr><th></th><th>Shock</th><th>Vibration</th><th>Drop</th></tr>
<tr><td>General</td><td>Operating:
Pulse shape：Half-sine waveform
Impact acceleration：15g
Pulse duration：11 ms
Number of</td><td>Operating:
5 ~ 500Hz ,
Acceleration：1.0G
Sweep time：15 minutes
Number of cycle：1 cycle for each axis
Vibration axes：X, Y and Z</td><td>According to ISTA Project 2A to determine a drop height in the following chart.
(test surface: concrete, with packing)6 surfaces
<table>
<tr><th>Package-product Weight</th><th>Drop Height</th></tr>
<tr><td>21-40.99 lb</td><td>32 in. (.8 m)</td></tr>
</table>
</td></tr>
</table>

	shocks : 18 shocks (3 shock for each ±axis) Orientation : ± X, ±Y and ±Z axes		*(9.53-18.59kg)*	

Configurations:

1. *WTP-9a66-15, Core i5-3317U CPU, 2G RAM, 320G HDD, 4 USB, 2 COM, 1 LAN*

WTP-8B66-19

System

CPU FCBGA1023 3rd Generation Intel® Core i7/i5/i3/Celeron® processor (17W max.)

Chipset HM65
Graphic Intel® integrated HD Graphics 4000
Audio None
LAN Marvell 88E8071 Giga LAN x 2
Memory Two 1066/1333 MHz DDR3 SODIMM socket support dual Channel, non-ECC, up to 8GB
I/O EC
SATA SATA 3, 600 MB/s transfer rate x 2, 2nd SATA connector for SATA DOM propose.
Serial port RS232,422,485 x 1 /RS232 x 5
USB External USB 2.0 x 4 (Type A)
Internal USB 2.0x 5
WDT Generates system reset; 256 segments, 0, 1, 2…255 sec/min.

BIOS

Brand: AMI
Flash ROM size: 32MB
Support RTC wakeup /Wake on LAN /Power on after power failure/PnP/ACPI/RTC
PS: com port have to be disabled if PXE enable. It is a limitation

Display

Brand	***AUO***
Model	***G190EG01 V1***
Resolution (pixel)	*SXGA 1280(x3) x 1024*
Active Area (mm)	*376.32 (H) x 301.06(V)*
Number of Colors	*16.7M*
View Angle (H/V)	*170 / 160*
Brightness (cd/m2)	*350*
Contrast Ratio	*1000:1*
Response Time (ms) (at 25°C)	*5*
Backlight	*LED*
Weight (g)	*1670*
life time<Hrs>	*50000*

Touch Screen

	ELO
Model name	*E000437*
Type	*5 wire RES*
Glove	*Any type glove*
Stylus	*No Limitation, can use any stylus*
Interface	*USB*
Light Transmission	*80±5%*
Hardness	*4H*
Glass thickness	*2.4mm*
Linearity	*X≦1.5%, Y≦1.5%*
Active area	*308.11x232.09mm*
Resolution	*4096x4096*
Lifetime	*36 million activations*

Storage
2.5" SATA drive bay x 1

Expansion slots
Mini-PCIe x2

External water/dust resistant I/O (rear side)
USB 1 x M12 8pin for USB 1/2
1 x M12 8pin for USB 3/4
COM 1 x M12 8pin for COM 1/RS-232
1 x M12 8pin for COM 2/RS-232
RS-232: TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND

LAN 1 x M12 8pin for LAN 1
Power 1 x M12 5pin DC power connector

Power
Power DC-In connector x 1
Power Input DC7V~32V
Power Adapter AC 90 ~ 264V / 47 ~ 63 Hz / DC output 12V,
Power ON/Off and reset buttons at rear side
Power consumption 67.5w(full loading) 2.3w (S3)

Mechanical & Environmental
Material construction SUS304 stainless steel enclosure , chassis type Fanless cooling
Water and dust protection IP66 / NEMA4X
Operation Temperature 0~40℃ (IEC60068-2-2, HDD, air flow cooling)
Storage Temperature -20~60℃
Operation Relative Humidity 10%~90%, non-condensing
Storage Relative Humidity 10%~90%, non-condensing
Dimensions 458x386x64
Net Weight 11.5kg
Gross Weight 15kg
*Mounting VESA (100x100 mmxmm) side mount (M6*2)*
Supported OS
Win 7, Win 7 Pro, Win8.1

Options

1. *Wireless or Wireless and BT kit (2 ant)*
2. *Waterproof COM cable, cable length is 2 meters*
3. *Waterproof USB cable, cable length is 2 meters*
4. *Waterproof LAN cable, cable length is 2 meters*
5. *wall mount / table mount bracket (option)*
6. *SSD*
7. *Intel Core i7-3517U (option) turbo mode disable*
8. *2 external LAN*

Customization (by DRF)

1. *sunlight readable optical bonding*
2. *anti UV and 7H coating*
3. *full flat PCT touch screen IP69K*
4. *1000 nit high brightness LCD*
5. *LCD Auto dimming*
6. *LCD Super dimming (low brightness)*

Packing list

7. *WTP-8B66-19*
8. *DVD-Title for driver and manual*
9. *Power adapter*
10. *Power cord*

Regulatory

FCC, CE (EMC), VCCI class B

Shock/Vibration /Drop

	Shock	*Vibration*	*Drop*
General	*Operating: Pulse shape : Half-sine waveform Impact acceleration : 15g Pulse duration : 11 ms Number of shocks : 18 shocks (3 shock for each ±axis) Orientation : ± X, ±Y and ±Z axes*	*Operating: 5 ~ 500Hz , Acceleration : 1.0G Sweep time : 15 minutes Number of cycle : 1 cycle for each axis Vibration axes : X, Y and Z*	*According to **ISTA Project 2A** to determine a drop height in the following chart. (test surface: concrete, with packing)6 surfaces*

Package-product Weight	*Drop Height*
21-40.99 lb (9.53-18.59kg)	*32 in. (.8 m)*

Configurations:

2. *WTP-8B66-19, Core i5-3317U CPU, 2G RAM, 320G HDD, 4 USB, 2 COM, 1 LAN*

System View

WTP-8B66-15 Outline Drawing

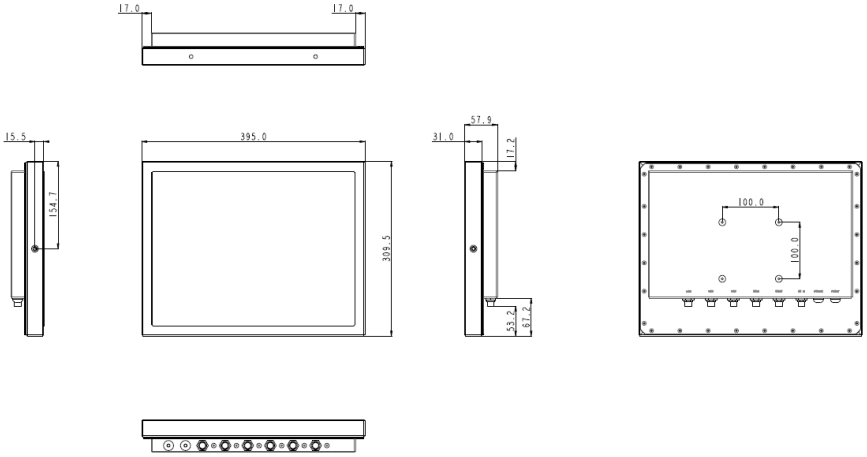
17.0
17.0
15.5
154.7
395.0
309.5
31.0
57.9
17.2
53.2
67.2
100.0
100.0

WTP-8B66-19 Outline Drawing

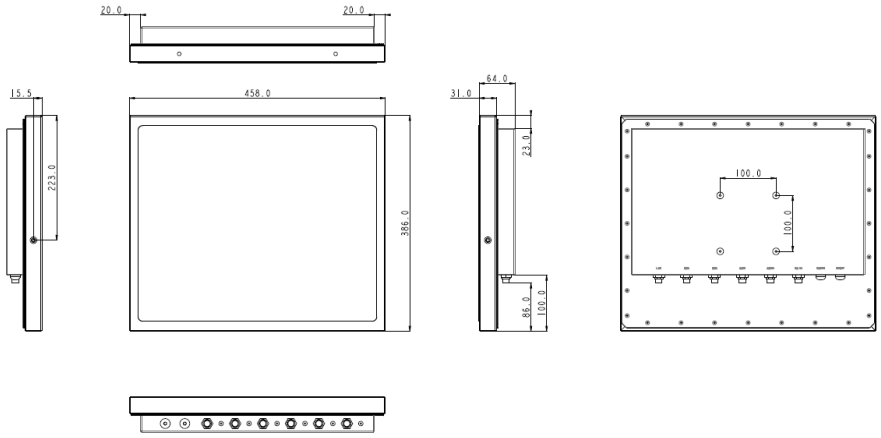

Setting up the System

The following is a summary of the steps in setting up the system for use.

CAUTION: Make sure that power to the system and each of the devices to be connected is switched OFF before plugging in the connectors.

1. Make any required external connections such as the keyboard, and mouse.
2. Plug the appropriate end of the power cord into the power connector of the system. Then plug the other end of the power cord to an electrical outlet.
3. Press the power switch of the system to turn on the system's power.
4. If necessary, run the BIOS SETUP program to configure the system (see Chapter 3).
5. Install the software drivers if necessary.

Installing System Software

Recent releases of operating systems from major vendors include setup programs, which load automatically and guide you through hard disk preparation and operating system installation. The guidelines below will help you determine the steps necessary to install your operating system on the Panel PC hard drive.

NOTE: Some distributors and system integrators may have already pre-installed system software prior to shipment of your Panel PC.

Installing software requires an installed HDD. Software can be loaded in the WTP-8B66 Panel PC using any of below methods:

Method 1: Use the Ethernet

You can use the Ethernet port to download software from the net to the HDD that has been pre-installed in WTP-8B66 Panel PC

Method 2: Use the COM Port

By connecting another PC to the WTP-8B66 Panel PC with an appropriate cable, you can use transmission software to transmit Operation System Software to the HDD that has been pre-installed in the WTP-8B66 Panel PC.

Method 3: Use a External CD-ROM

In order to boot up system from USB-CD/DVD drive, please connect USB-CD/DVD drive, turn on computer power, keep on pressing "F11" key, go into BIOS quick boot menu, select "USB-CD ROM", WAIT FOR 20 SECONDS, then press enter, system OS will boot up from USB-CD/DVD drive directly

Then you can use the external CD-ROM to transmit the software to the HDD that has been pre-installed in the WTP-8B66 Panel PC

Installing the Drivers

After installing your system software, you will be able to set up the LAN, VGA, Audio and USB functions. All drivers are stored in a CD disc, which can be found in your accessory pack. The various drivers and utilities in the disc have their own text files that help users install the drivers and understand their functions.

Follow the sequence below to install the drivers:

Step 1 – Install Intel® INF Driver

Step 2 – Install Intel® VGA Driver

Step 3 – Install Intel® LAN Driver

Step 4 – Install Audio Driver

Step 1 – Install Intel® INF Driver

1. Open fie of **chipset**
2. Click on the **setup.exe**
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically
5. Reboot system

Step 2 –Install Intel® VGA Driver

1. Open fie of **VGA**
2. Select the OS folder your system is
3. Click on the **.exe** file located in the OS folder
4. Follow the instructions that the window shows
5. The system will help you install the driver automatically
6. Reboot system

Step 3 – Install Intel® LAN Driver

1. Open fie of **LAN**
2. Click on the **setup.exe**
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically
5. Reboot system

Step 4 – Install Audio Driver

1. Open fie of **LAN**
2. Click on the **setup.exe**
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically
5. Reboot system

Appendix

A. Jumper settings and Connectors

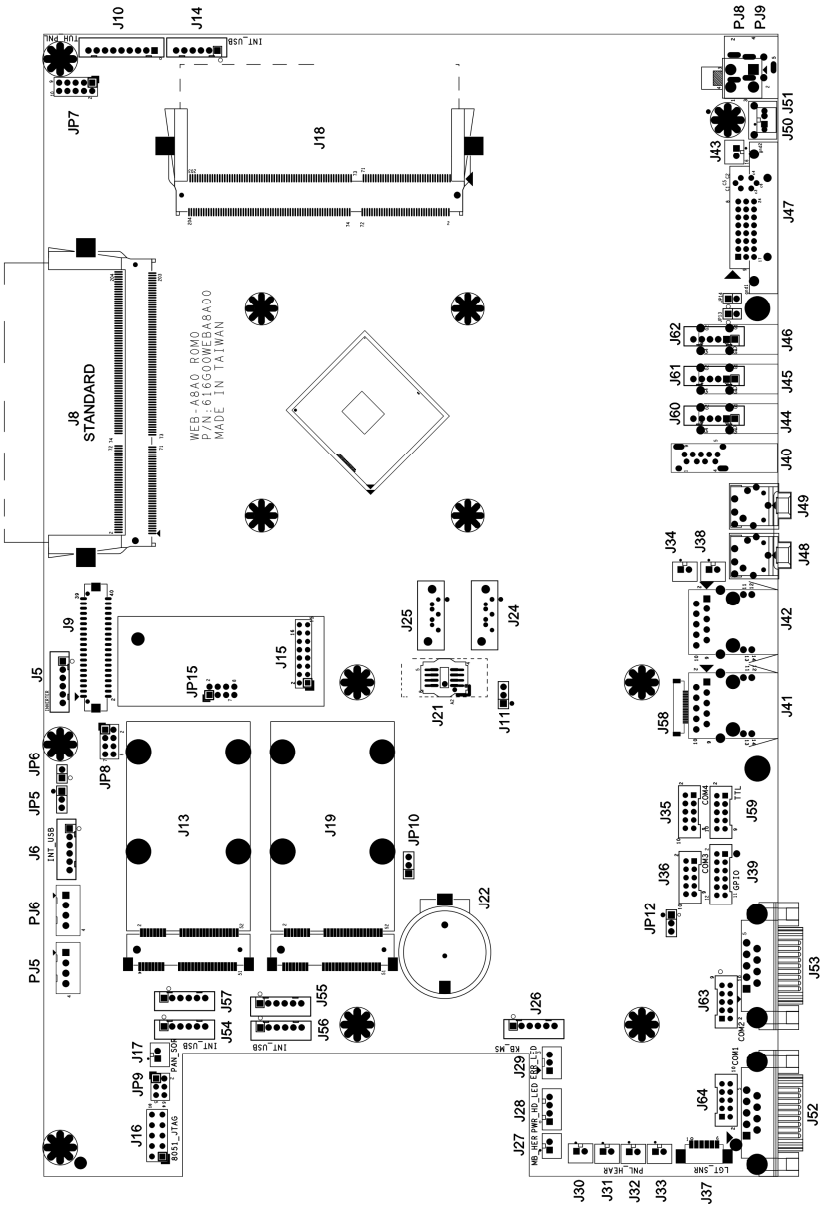

JP5 – Backlight Type Selection



Description	Jumper Setting
Analog Inverter	1-2 (for 10”)
PWM Inverter	2-3(for 12’’/15”)

● JP6 – Backlight control level Selection

Description	Jumper Setting
+3.3V	1-2
+5V	***OPEN (default)***

● JP7 – Touch Panel Type Selection



Description	Jumper Setting
3M type	***1-2, 3-4 (default)***
ELO type	5-6,7-8

● JP8 – LVDS Power Selection



Description	Jumper Setting
+3.3VS(for 10"/12"/15")	***5-6, 7-8 (default)***
+5VS(for 17"/19")	1-2, 3-4

JP9 – Sensor Selection



Description	Jumper Setting
No Panel Sensor	***1-2(default)***
No MB Sensor	3-4
Reserved	5-6

JP10 – CMOS Clear

Description	Jumper Setting
Normal Open	***1-2 (default)***
CMOS Clear	2-3

JP11 – SATA / SATADOM Selection



Description	Jumper Setting
SATA	***2-3(default)***
SATA DOM	1-2

JP12 – COM3 Power Selection



Description	Jumper Setting
+5VS	***2-3(default)***
+12VS	1-2

JP13,J14 –*Y cable** Support both DVI+VGA



Description	JP13	JP14
No support (default)	*Open*	*Open*
Support	1-2	1-2

**Support Wincomm Y cable only.*

● JP15 –Panel Resolution Selection

JP15 jumper setting				Panel Resolution	Color Depth
1-2	3-4	5-6	7-8		
0	0	0	0	800x600	6bit
0	0	0	1	1024x768	6bit
0	0	1	0	1024x768	8bit
0	0	1	1	1280x768	6bit
0	1	0	0	1280x800	6bit
0	1	0	1	1280x960	6bit
0	1	1	0	1280x1024	8bit
0	1	1	1	1366x768	6bit
1	0	0	0	1366x768	8bit
1	0	0	1	1440x900	8bit
1	0	1	0	1440x1050	8bit
1	0	1	1	1600x900	8bit
1	1	0	0	1680x1050	8bit
1	1	0	1	1600x1200	8bit
1	1	1	0	1920x1080	8bit
1	1	1	1	1920x1200	8bit

Connector Definition

- **PJ5 /PJ6 – HDD Power Connector**



Pin #	Signal Description
1	+12VS
2	GND
3	GND
4	+5VS

- **PJ8 – Power Jack**

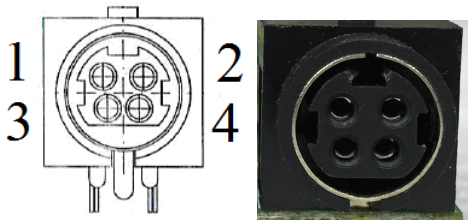

Pin #	Signal Description
1	DC In
2	DC In
3	GND
4	GND

- **PJ9 – Power Input Connector**

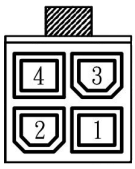

Pin #	Signal Description
1	GND
2	GND
3	DC In
4	DC In

● J5 – LCD Inverter Wafer Header



Pin #	Signal Description
1	+12VS
2	+12VS
3	Backlight Control
4	Backlight Enable
5	GND
6	GND

● J6, J54, J56 – Internal USB 2.0 Pin Header



Pin #	Signal Description
1	+5VSB
2	+5VSB
3	Data -
4	Data +
5	GND
6	GND

J9 – LVDS Interface

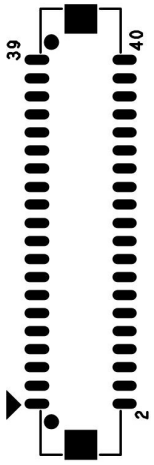

Pin #	Signal Description	Pin #	Signal Description
39	GND	40	GND
37	Ground	38	GND
35	A_TXD3+	36	B_TXD3+
33	A_TXD3-	34	B_TXD3-
31	GND	32	GND
29	A_CLK+	30	B_CLK+
27	A_CLK-	28	B_CLK-
25	GND	26	GND
23	A_TXD2+	24	B_TXD2+
21	A_TXD2-	22	B_TXD2-
19	GND	20	GND
17	A_TXD1+	18	B_TXD1+
15	A_TXD1-	16	B_TXD1-
13	GND	14	GND
11	A_TXD0+	12	B_TXD0+
9	A_TXD0-	10	B_TXD0-
7	GND	8	GND
5	GND	6	GND
3	+LVDS PWR	4	+LVDS PWR
1	+LVDS PWR	2	+LVDS PWR

J10 – Resistance Touch Screen Interface



Pin #	Signal Description		
	8-wire	4-wire	5-wire
1	UL(X+)	UL(X+)	UL(X+)
2	UR(Y+)	UR(Y+)	UR(Y+)
3	N/A	N/A	PROBE
4	LR(X-)	LR(X-)	LR(X-)
5	LL(Y-)	LL(Y-)	LL(Y-)
6	X+_DRIVE	N/A	N/A
7	Y+_DRIVE	N/A	N/A
8	X-_DRIVE	N/A	N/A
9	Y-_DRIVE	N/A	N/A

J13 / J19 – Mini PCI Express Socket

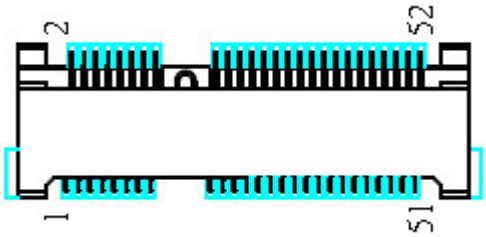

J14 –P-CAP Touch screen interface*



Pin #	Signal Description
1	+5VSB
2	+5VSB
3	Data -
4	Data +
5	Ground
6	Ground

* Res(J10) with P-CAP(J14) select one

J15 –TPM / ID-394



Pin #	Signal Description	Pin #	Signal Description
16	+3.3VSB	15	SUS_STAT#
14	SMB DATA	13	GND
12	SMB CLK	11	Debug CLK
10	CLKRUN#	9	LPC Frame#
8	+5VSB	7	LPC AD3
6	+3.3VS	5	LPC AD2
4	SERIRQ	3	LPC AD1
2	PLT reset#	1	LPC AD0

J16 – For JTAG



Pin #	Signal Description	Pin #	Signal Description
10	Reserved	9	GND
8	Reserved	7	+3.3V
6	Reserved	5	+3.3V
4	C2D	3	GND
2	GND	1	+3.3V

J17 – Panel Temp Sensor Connector

Pin #	Signal Description
1	PANEL_SENSOR
2	GND

- **J21 – BIOS Socket**

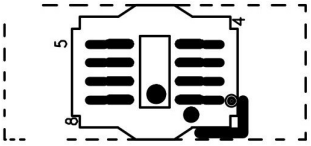

- **J22 – Battery Socket**

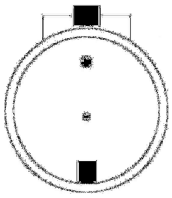

- **J24 – Standard SATA / SATA DOM Interface**



Pin #	Signal Description
1	Ground
2	Tx+
3	Tx-
4	Ground
5	Rx-
6	Rx+
7	Ground / +5VS

J25 – Standard SATA Interface

Pin #	Signal Description
1	Ground
2	Tx+
3	Tx-
4	Ground
5	Rx-
6	Rx+
7	Ground

J26 – PS2 KB/MS



Pin #	Signal Description
1	KBDATA
2	MSDATA
3	Ground
4	+5VSB
5	KBCLK
6	MSCLK

J27 – MB Heater Connector

Pin #	Signal Description
2	GND
1	+12VSB

J28 – Power / HDD LED



Pin #	Signal Description
4	PWR_LED#
3	+3.3VSB
2	+3.3VSB
1	SATA_LED#

J29 – Heater Error / Heating LEDs



Pin #	Signal Description
3	+3.3V
2	HEATER_LED#
1	ERROR_LED#

J30, J31, J32, J33 – Panel Heater Connector

Pin #	Signal Description
1	+12VSB
2	GND

J34, J38 – RIGHT / LEFT CH for Speaker.

Pin #	Signal Description	
	J34 (RIGHT CH)	J38 (LEFT CH)
1	ROUT+	LOUT+
2	ROUT-	LOUT-

J35 – Internal COM4 Serial Port

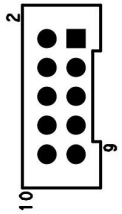

Pin #	Signal Description	Pin #	Signal Description
2	232_DSR#	1	232_DCD#
4	232_RTS#	3	232_SIN
6	232_CTS#	5	232_SOUT
8	232_RI#	7	232_DTR#
10	+5VS	9	GND

J36 – Internal COM3 Serial Port

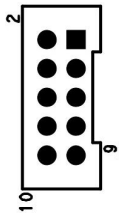

Pin #	Signal Description	Pin #	Signal Description
2	232_DSR#	1	232_DCD#
4	232_RTS#	3	232_SIN
6	232_CTS#	5	232_SOUT
8	232_RI#	7	232_DTR#
10	+5VS/+12VS	9	GND

J37 – Light Sensor Connect

Pin #	Signal Description
1	+3.3V
2	NC
3	Ground
4	SCL1
5	NC
6	SDA1

J39 – GPIO Connect

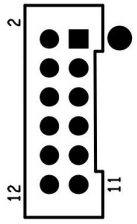

Pin #	Signal Description	Pin #	Signal Description
2	GEN_GPI1	1	GEN_GPO1
4	GEN_GPI2	3	GEN_GPO2
6	GEN_GPI3	5	GEN_GPO3
8	GEN_GPI4	7	GEN_GPO4
10	+5V	9	+5V
12	GND	11	GND

J40 – External USB 3.0 Port

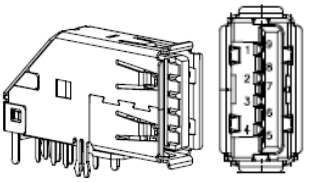

J41 / J42 –External RJ45 Ethernet Port

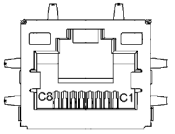

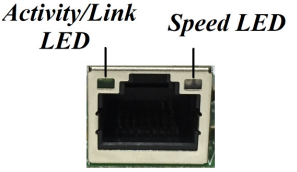

Activity/Link LED

Status	Description
OFF	No Link

Blinking	Data Activity
ON	Link

Speed LED

Status	**Description**
OFF	10 Mbps
Green	100 Mbps
Orange	1 Gbps

● J43 – Power Switch connect

Pin #	**Signal Description**
1	Power ON
2	GND

● J44,J45,J46 – External USB 2.0 Port





Pin #	**Signal Description**
1	+5V
2	USB_D-
3	USB_D+
4	GND

J47 – External DVI-I Connector



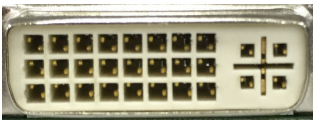

J48 / J49 – External Audio Phone Jack



Audio Jack	Signal Description
J48	Line Out (stereo) Green
J49	Microphone (stereo) Pink

J50 – Reset Button



Pin #	Signal Description
1	SYS_RESET#
2	GND
3	GND
4	GND

J51 – Reset connector

Pin #	Signal Description
1	SYS_RESET#

2	GND

J52 – External COM1 Connector

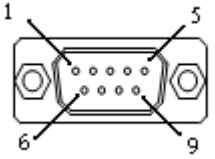

Pin #	Signal Description		
	RS-232	RS-422	RS-485
1	DCD	TX D-	DATA-
2	RXD	TX D+	DATA+
3	TXD	RX D+	--
4	DTR	RX D-	--
5	GND	--	--
6	DSR	--	--
7	RTS	--	--
8	CTS	--	--
9	RI#	--	--

J53 – External COM2 Connector

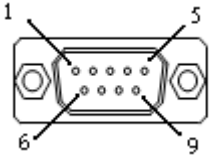

Pin #	Signal Description	Pin #	Signal Description
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI#	10	--

J54/J55*/J56/J57* – Internal USB 2.0 Pin Header



Pin #	Signal Description
1	+5VSB
2	+5VSB
3	Data -
4	Data +
5	GND
6	GND

*J55/J57 reserve for Mini PCIE x1 share.

J60/J61/J62 – Internal USB 2.0 Pin Header



Pin #	Signal Description
1	+5VSB
2	+5VSB
3	Data -
4	Data +
5	GND
6	GND

*Co-lay with external USB port (J44, J45 and J46).

J58 – External PoE Slot (Option)

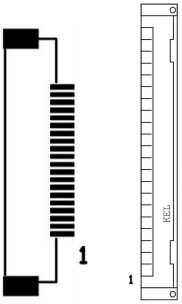

Pin #	Signal Description
1	LAN0_MDI0_P
2	LAN0_MDI0_N
3	GND
4	GND
5	LAN0_MDI1_P
6	LAN0_MDI1_N
7	GND
8	GND
9	GND
10	GND
11	GND
12	GND
13	GND
14	GND
15	LAN0_MDI2_P
16	LAN0_MDI2_N
17	GND
18	GND
19	LAN0_MDI3_P
20	LAN0_MDI3_N